




**CP400 & CP700**  
**Commercial Power Amplifiers**



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435

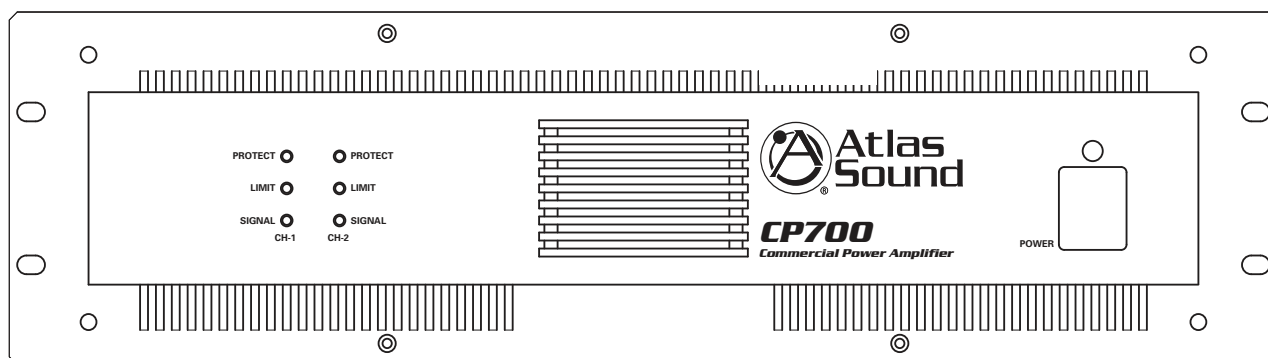

### TABLE OF CONTENTS

Introduction .....	3
Features .....	3
Applications .....	3
Front Panel Description .....	4
Rear Panel Description .....	5
Input Wiring .....	7
Speaker Output Wiring .....	9
Specifications .....	15
Warranty .....	16

### SAFETY INSTRUCTIONS

Please Read Carefully Before Installing or Operating This Product

- Read instructions fully.
- Pay attention to any and all warnings.
- Connect this amplifier only to the correct operating voltage.
- Do not attempt to service this unit. Only a qualified service technician should open this unit for servicing.
- Warning: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

### HEARING DAMAGE!

All professional loudspeaker systems are easily capable of producing very high sound pressure levels. Use care with the operation of this amplifier and wear the appropriate hearing protection. Exposure to excessive sound pressure levels can cause permanent hearing damage.

### SHOCK HAZARD!

The Atlas Sound CP400 and CP700, when in operation, can produce a shock hazard at the speaker terminals. Make sure the amplifier is turned off when installing or removing connections at the speaker terminal barrier strip. After connecting the proper speaker load, **REPLACE** the terminal strip cover!

### VENTILATION

Although the CP400 and CP700 are internally fan cooled and have thermal protection circuitry, adequate ventilation is required to ensure trouble-free operation. When rack mounting one or more of the Atlas Sound CP Series power amplifiers, install an exhaust fan in the rack to evacuate heat buildup. Consult Atlas Sound's Technical Support at 1-800-876-3333 for advice on thermal management and assistance with rack selection for this product.

### RACK MOUNTING

Although the internal output transformers are mounted close to the front panel, when rack mounting the CP400 and CP700, be sure the unit has adequate front and rear support.



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435



## **INTRODUCTION**

Congratulations and thank you for purchasing the Atlas Sound CP400/CP700 dual channel power amplifier. This product is a professional grade audio power amplifier specifically designed for demanding contractor applications and engineered to provide years of faithful service. Two independent channels driven by separate power supplies ensure maximum channel separation and ultra low distortion figures. Whether your application is a large distributed constant voltage sound system or a high SPL sound reinforcement system, the Atlas Sound Series is the answer for high power/low cost amplification needs.

## **FEATURES**

- Independent power supplies
- Soft clip limiter protection
- Dual-speed, high efficiency fan cooling
- Stepped attenuators mounted on the rear for security
- Stereo, bridge, or parallel operating modes selectable via rear mounted switch
- Balanced inputs on barrier strip and XLR connectors
- Loop through feature on male XLRs, one per channel input
- Short-circuit, temperature, and DC offset protection
- 25V, 70.7V, 100V, and direct coupled (2,4, and 8  $\Omega$ ) outputs mounted on barrier strips with covers for safety
- Toroidal output transformers provide extended high frequency response and effectively lower the electrical interference
- Power-up muting

## **APPLICATIONS**

The Atlas CP400/CP700 are the perfect choice for distributed paging/BGM systems, foreground music systems, and distributed sound masking applications. They are also at home in night clubs, theaters, portable sound systems, and anywhere clean high-fidelity audio amplification is needed.



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435



### FRONT PANEL DESCRIPTION

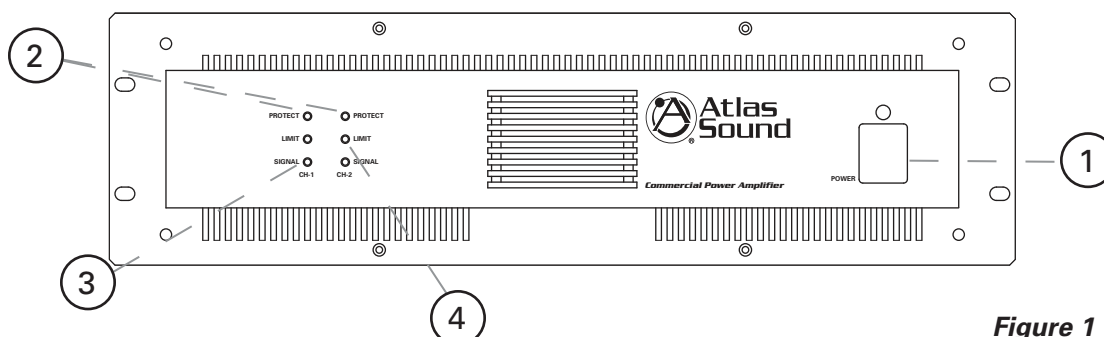


Figure 1

#### 1. Power Switch

This rocker switch supplies power to the amplifier. A red LED located above the power switch will illuminate when the amplifier is switched on.

#### 2. Protect LED Indicators

The amplifier features several types of protection circuitry to prevent damage during power-up or fault conditions. If any of these LEDs illuminate, one of the various protection features is safeguarding the amplifier. The output relays will disconnect the speaker loads when the protection circuitry detects a fault condition.

- **Loudspeaker Protection** - When power is first applied, the speaker protection relay is open, preventing transients from reaching the loudspeakers. After the internal power supplies have stabilized, the relay will close, connecting the amplifier output to the load. The yellow Protect LEDs will illuminate during this power-up process.
- **Thermal Protection** - The amplifier protection circuitry monitors itself for excessive internal operating temperatures. In the event this circuitry detects abnormal thermal conditions (blocked cooling fan or high ambient temperatures), the speaker relay will disconnect the speaker load from the amplifier. Once the internal operating temperature drops back to a safe level, the relay will close, reconnecting the speaker load to the amplifier.
- **Short Circuit Protection** - The yellow Protect LEDs will illuminate should the amplifier detect a short circuit on the attached speaker load or if the load impedance is too low. When this condition is detected, the internal speaker relays will open up, disconnecting the load from the amplifier. The protection circuitry will stay activated until the fault is cleared.

**Note:** Once the specific fault has been corrected, the power may have to be cycled to reset the protection circuitry.

#### 3. Signal "Status" LED Indicator

The green "Status" LEDs will illuminate once the input signal has reached -26 dBV or higher.



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435



### 4. Limit LED Indicator

The CP400 and CP700 come equipped with limiter circuitry and LEDs to indicate when this circuitry is activated. The limiter circuitry engages only when the input signals reach a specific, factory set magnitude. Once this limit has been reached, the circuitry will reduce the input level enough to prevent clipping at the speaker output terminals.

## REAR PANEL DESCRIPTION

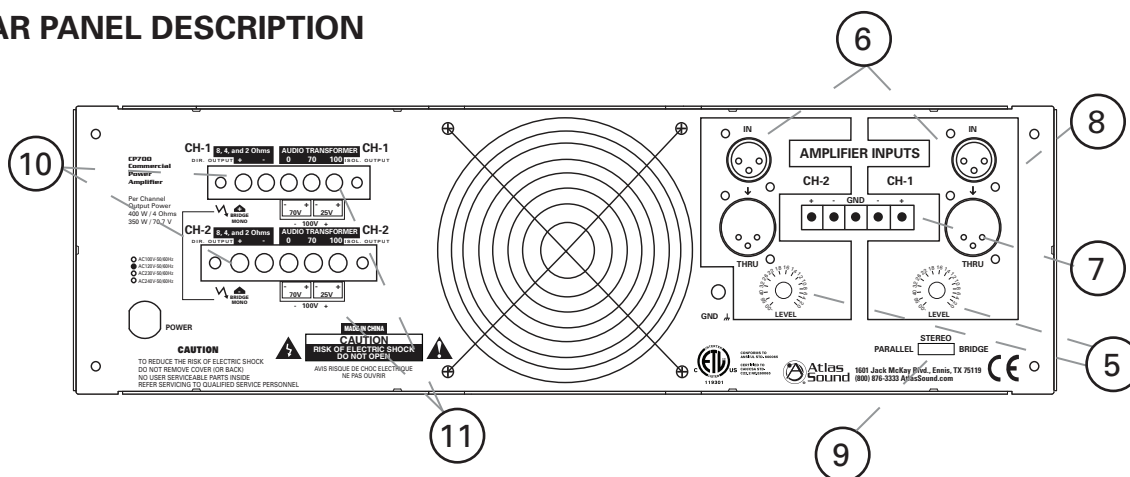


Figure 2

### 5. Gain Controls

One stepped attenuator per channel increases or decreases the sensitivity by 2 dB per step. Maximum voltage gain is 32 dB.

### 6. CH1/CH2 Inputs (XLR Connectors)

Two female XLR inputs (one per channel) are provided. These inputs are balanced and configured as follows: pin 1 ground, pin 2 +, pin 3 -. The XLR connections are typically used in portable audio systems where quick connect and disconnect is warranted.

### 7. Balanced Barrier Strip Inputs

Balanced inputs are provided on this barrier strip for permanent installation applications. The use of the appropriate spade type lug is highly recommended for best connection integrity and a neat, professional appearance.

### 8. CH1/CH2 Loop Through

Two male XLR (one per channel) are provided for looping the input signals to other devices. These connectors are wired in parallel with the female XLR inputs, pin for pin.



1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435



### 9. Stereo/Parallel/Bridge Switch

This 3 position switch changes the operating mode of the amplifier. **DO NOT** move this switch when the amplifier is powered up and connected to a load.

- **Stereo** - When the switch is set to this position, the amplifier operates as two independent amplifiers. Use this position for stereo program material or for two discreet paging/sound masking zones.
- **Parallel** - When the switch is set to this position a single mono input signal is to be used. Connect the input wiring to either channel 1 **OR** channel 2. The one input signal will drive both amp channels. Use this position when two speaker zones are being fed by a mono signal. (See note below)
- **Bridge** - When the switch is set to this position, connect the mono input signal to channel 1 **ONLY**. The speaker load is connected across the two positive terminals as shown in Figure 7 on page 10. The amplifier will deliver approximately twice the voltage across the load. Please observe the minimum load specification when operating in Bridge mode.

**Note:** A 6 dB loss of output power will occur when operating in parallel mode. To overcome this loss, connect the positive terminal on input 1 to the positive terminal on input 2 and connect the negative terminal on input 1 to the negative terminal on input 2. Short lengths of 22-gauge wire can be used.

### 10. CH1/CH2, Low Impedance Speaker Outputs

The amplifier direct speaker outputs bypass the internal constant voltage transformers and are used for direct connection to loudspeakers. The amplifier will operate into 2, 4, and 8  $\Omega$  loads. The use of appropriately sized spade lugs is recommended for speaker wire termination; connect the speaker line common to the "-" terminal and the positive lead to the "+" terminal.

For high power applications, use the proper gauge wire for the speaker connections. Contact Atlas Sound Tech Support (1-800-876-3333) for assistance in determining the proper size wire.

### 11. CH1/CH2, 25/70.7/100V Speaker Outputs

The amplifier will drive constant voltage speaker loads for use in commercial business music/paging systems and sound masking systems. The use of spade lugs for terminating and connecting the speaker home runs is recommended. The speaker line common connects to the "0" terminal and the positive lead connects to the desired voltage for required system requires for proper operation (Figures 8,9,10; Pages 11-12).

#### Calculating Constant Voltage Loads

To calculate the maximum quantity of transformer coupled loudspeakers you can safely connect to the amplifier, first add up the total number of speakers that will be connected to one channel of the amplifier, then multiply that total speaker number by the tap setting you plan to use. The result will be the load in watts that the amp output channel will see. It is good engineering practice to leave a 20% margin below the maximum rated output power of the amplifier. In this case, one channel of the amplifier can supply 350 W of power at 70.7V. Derate this by 20%, leaving 280 W of power available for constant voltage speakers.



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435




## INPUT WIRING

### Balanced Inputs

Balanced input wiring requires two conductors with shield (22-gauge is the most common). The use of crimp type spade lugs is highly recommended for permanent installations. At the input section located on the rear of the amplifier, wire the "hot"/positive lead to the "+" terminal, the "common"/negative lead to the "-" terminal and the shield/drain to the "ground" terminal (Figure 3).

The XLR inputs (+4 dB balanced line level) can be utilized with standard 3-pin XLR male to female patch cables to accommodate outputs from a mixer, equalizer, or crossover when the amplifier is used as a portable sound system amplifier.

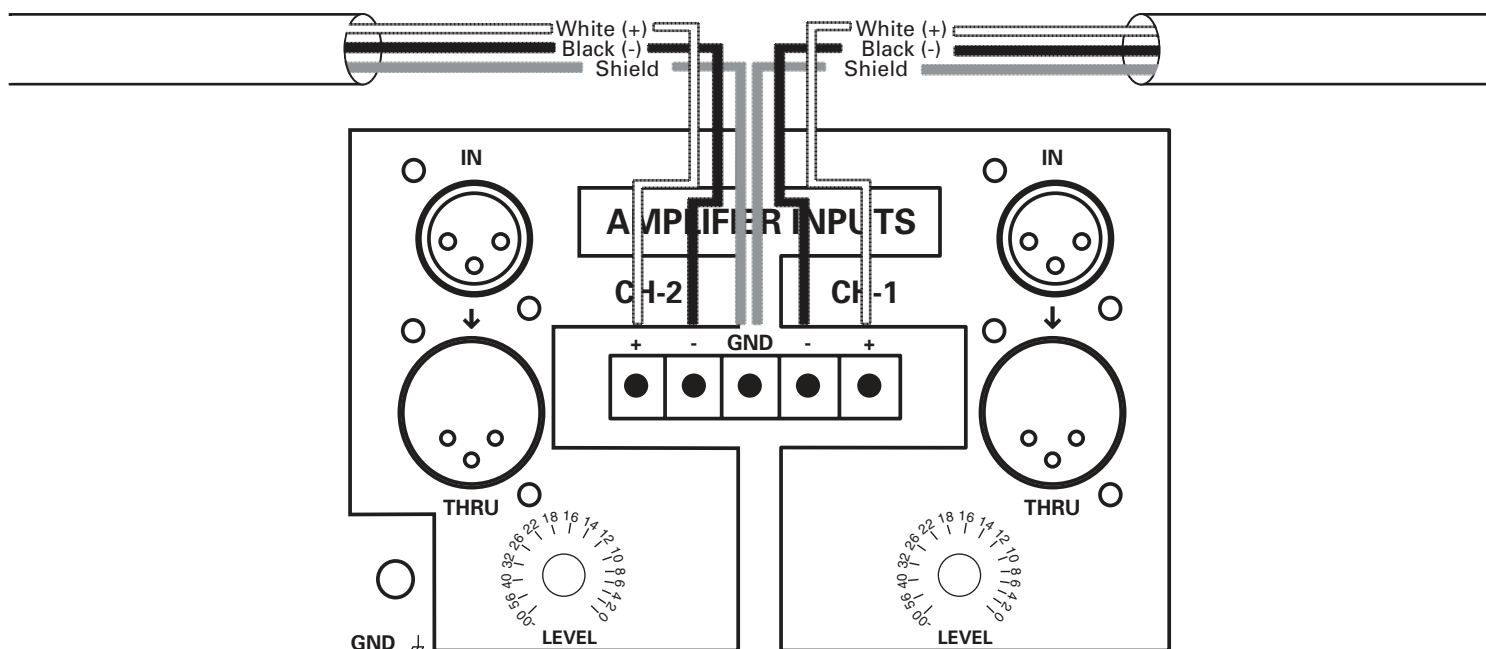

**Figure 3**



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435



### Unbalanced Input

Unbalanced wiring typically is found on consumer equipment (CD players, DVD players, etc.) and is generally a compromise of noise rejection and cable lengths. A single conductor and an overall shield are most common, as in the standard cables supplied with consumer equipment. Keep unbalanced wire lengths within 10' between equipment, wire the hot lead to the "+" terminal, and the shield to the ground terminal. Install a jumper wire between the "-" terminal and the ground – a loss of gain will result without this jumper (Figure 4).

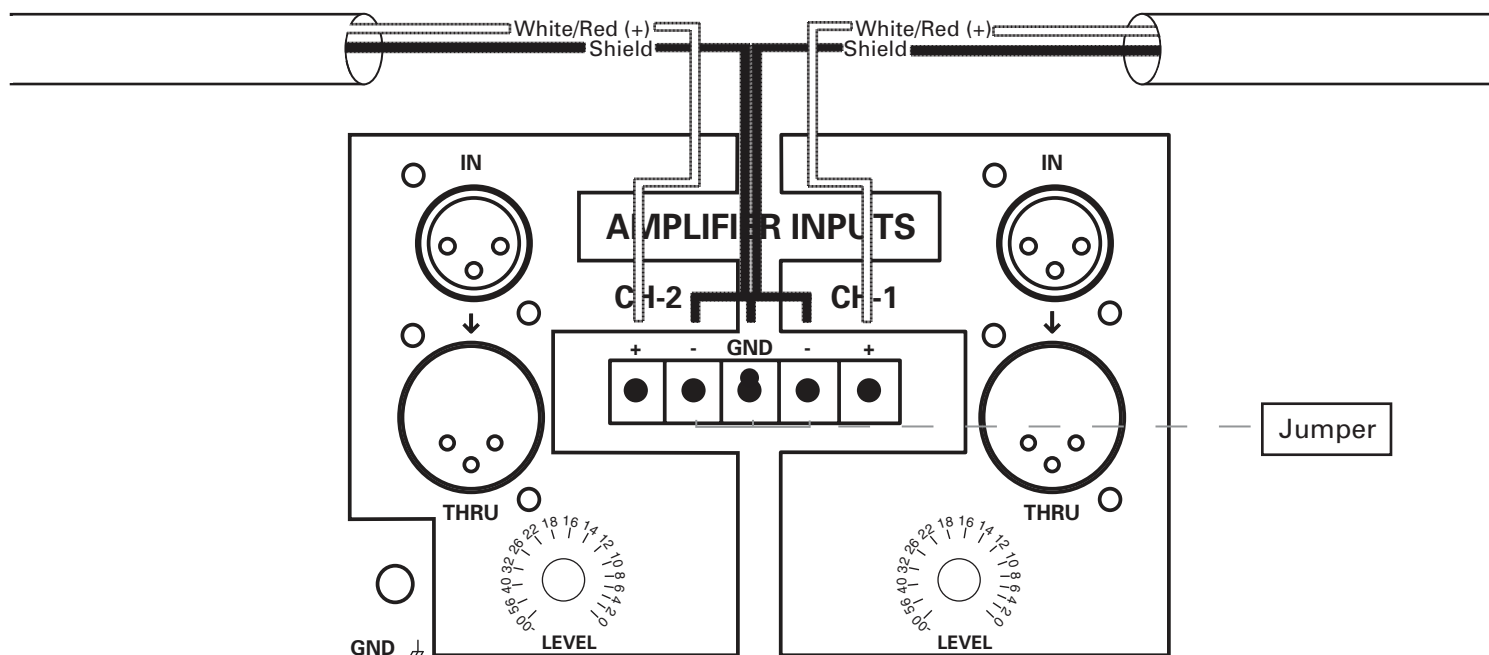


Figure 4



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435





### SPEAKER OUTPUT WIRING

#### Low Impedance Direct Coupled Output (Stereo)

For direct coupled operation into 2, 4, and 8  $\Omega$  loads, connect the loudspeaker leads to the barrier strip connections labeled "Direct Output"; connect the hot lead to the "+" terminal and the common lead to the "-" terminal. The use of heavy gauge wiring is recommended to avoid voltage drops, which can occur as a result of wasted power in the cable. Contact Atlas Sound Tech Support (1-800-876-3333) for suggestions on cable capacities. Be sure you know the quantity of speakers and cable lengths before calling (Figure 5).

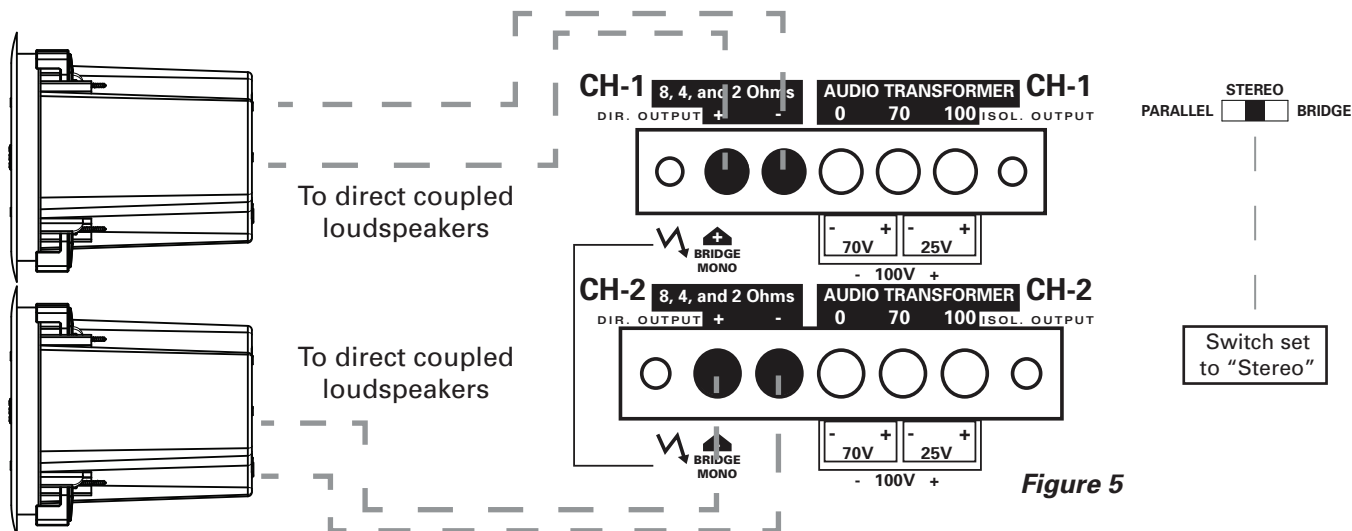


Figure 5

#### Low Impedance Direct Coupled Output (Parallel Mono)

Observe the speaker connection information in the preceeding paragraph (Stereo Direct Coupled Output). With the amplifier turned **OFF**, move the rear mounted selector switch to the "Parallel" position and connect your mono input wiring to either the channel one or channel two inputs. Both channels will be driven from this mono signal (Figure 6).

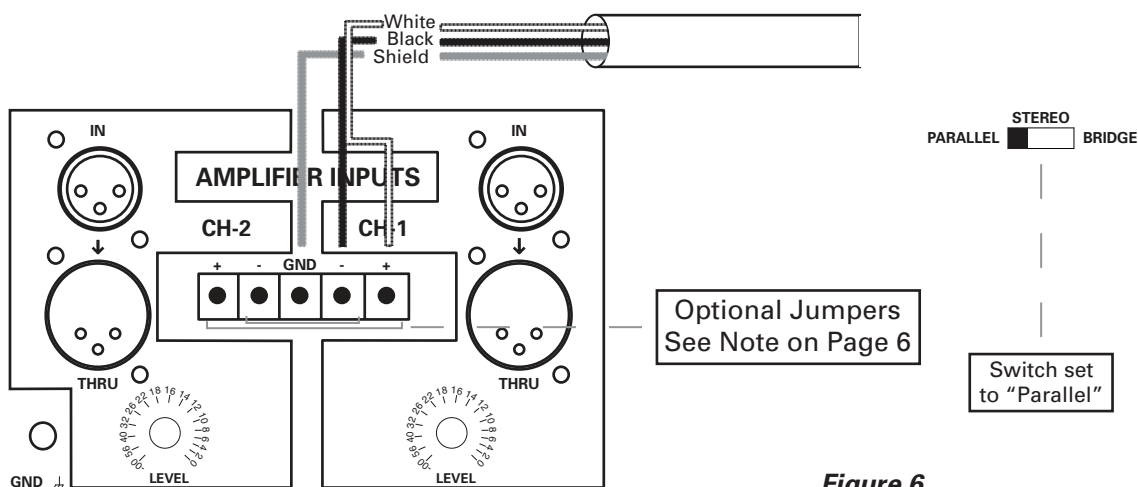


Figure 6



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435



### Bridge Mono Configuration (Direct Coupled)

If higher power levels are required, the Atlas amplifier can be used in Bridge Mono mode, which utilizes both channels of the amp across the speaker load.

With the amplifier turned **OFF**, move the rear mounted selector switch to the "Bridge" position and connect the input signal to channel one. Connect your speaker load (4 and 8  $\Omega$  only) across the "+" terminals of both channels, with channel 1 being positive and channel 2 being negative (Figure 7).

**CAUTION: A high voltage potential exists across the two "+" speaker terminals when operating in any Bridge Mode application!**

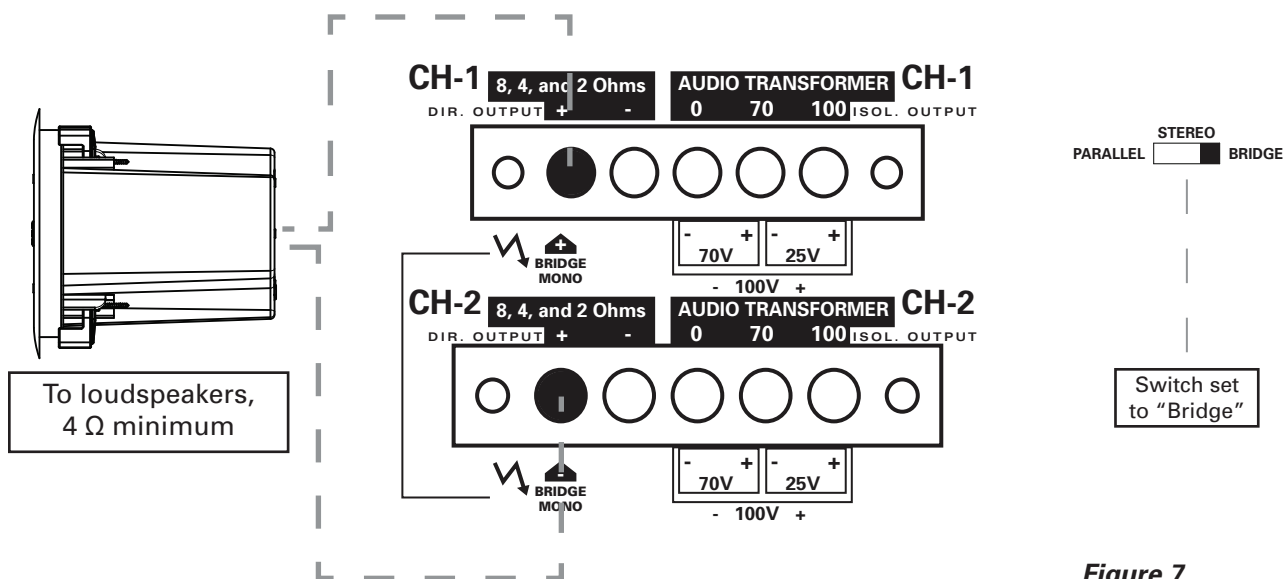


Figure 7

### 25V, 70.7V, and 100V Transformer Output Wiring

For transformer coupled operation into high impedance loads, connect your loudspeaker leads to the barrier strip connections labeled "Audio Transformer." Connect the speaker home runs as follows:

- **25V** - Connect the positive speaker lead to the terminal labeled "100" and the negative speaker lead to the terminal labeled "70" (Figure 8).
- **70.7V** - Connect the positive speaker lead to the terminal labeled "70" and the negative speaker lead to the terminal labeled "0" (Figure 9).
- **100V** - Connect the positive speaker lead to the terminal labeled "100" and the negative speaker lead to the terminal labeled "0" (Figure 10).

**Note:** Refer to page 6 of this manual to the paragraph entitled "Calculating Constant Voltage Loads" to determine how many transformer coupled loudspeakers you can drive with the Atlas amplifier.



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435

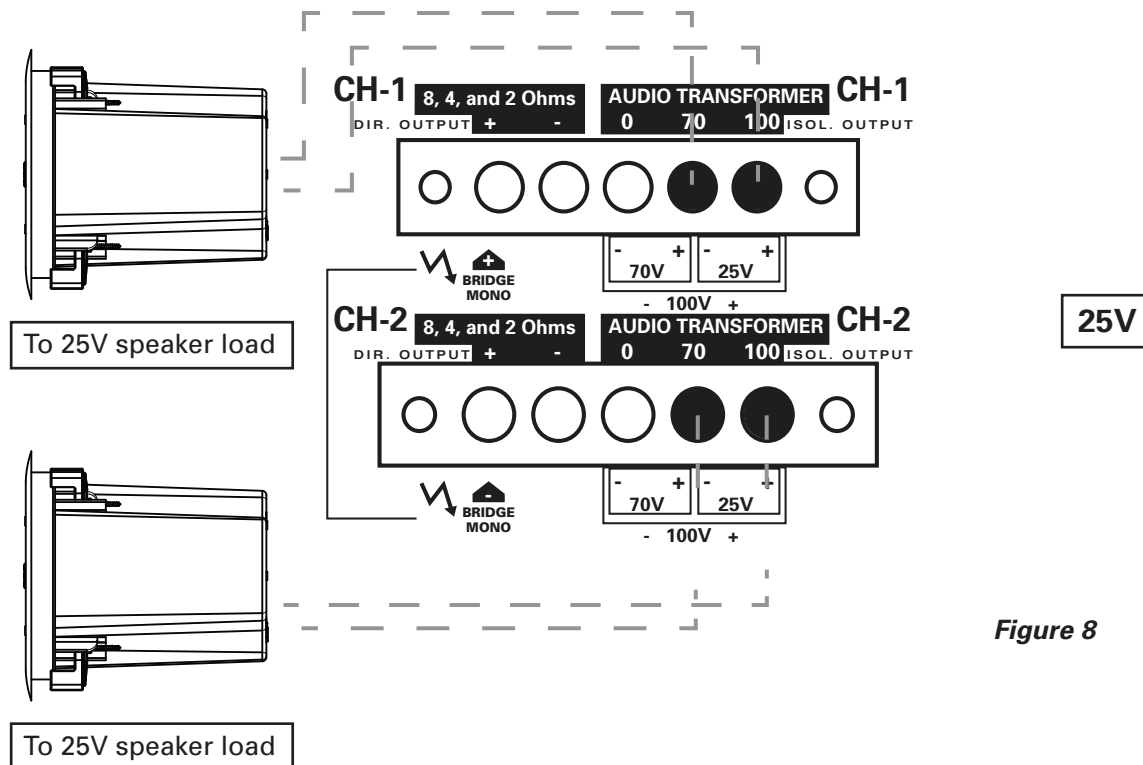


Figure 8


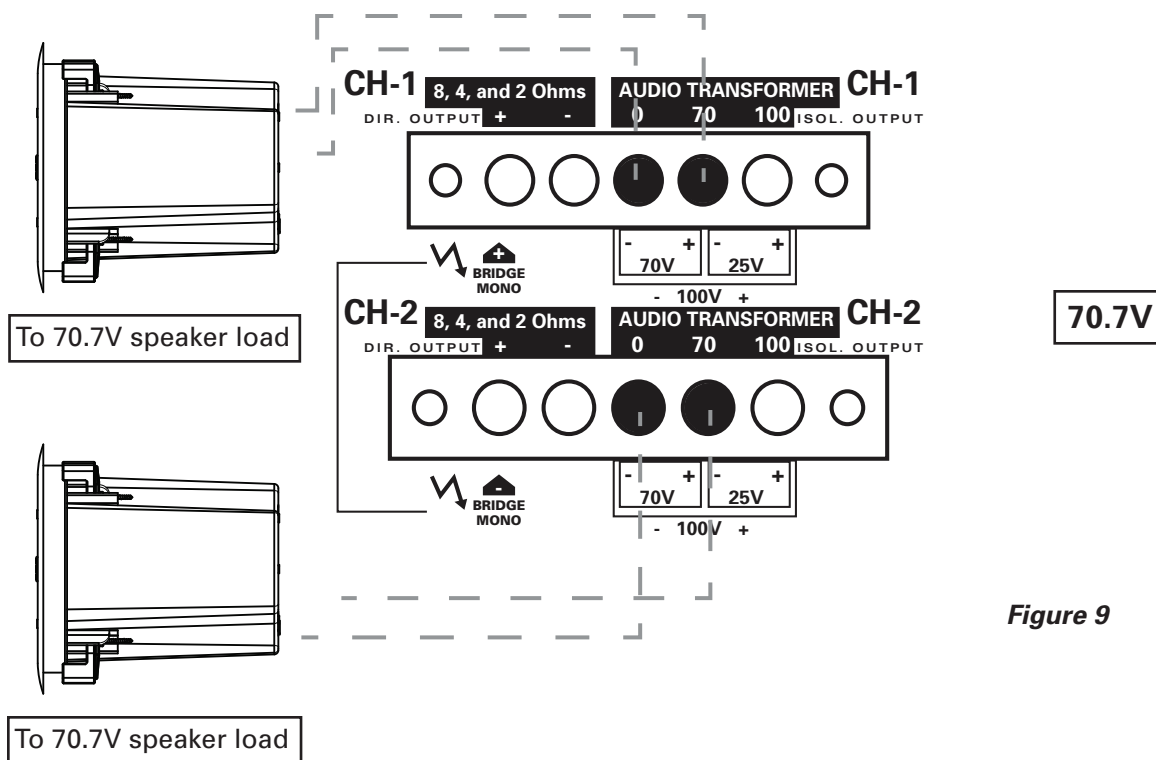


Figure 9



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435

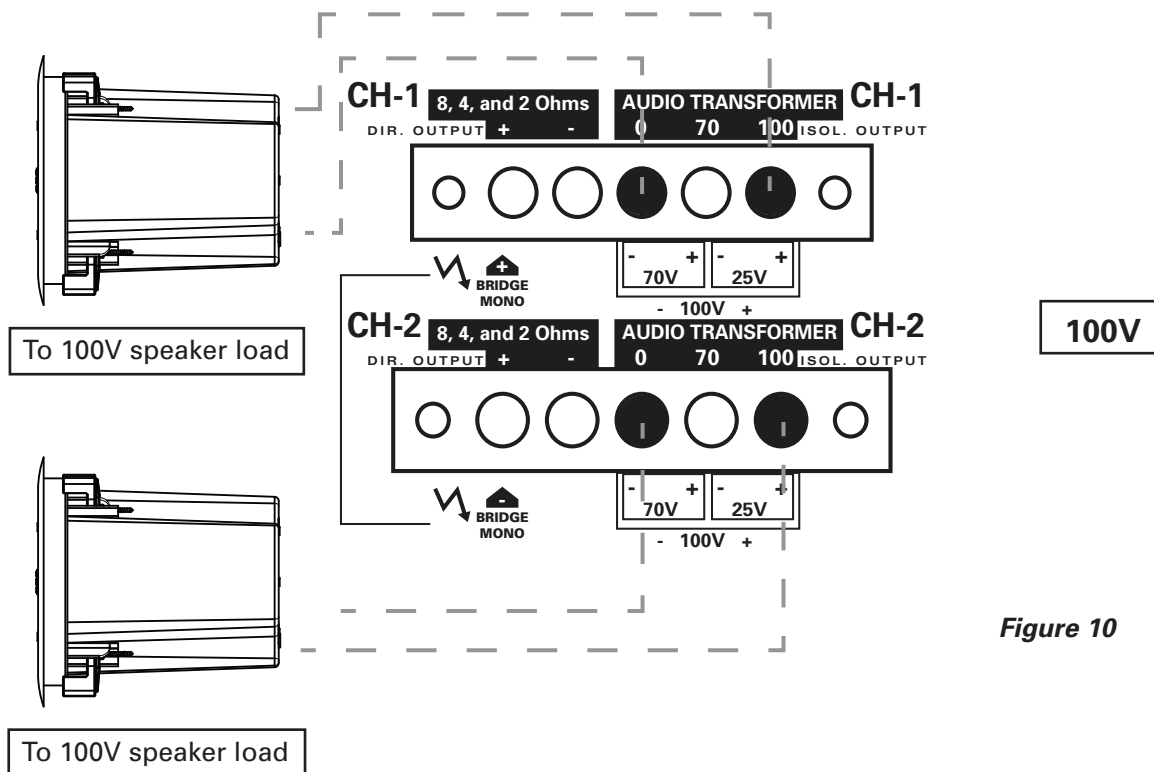

**Figure 10**



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435



### Bridge Mono Transformer Coupled Output Wiring for 140V/200V Output Operation

The amplifier can be configured to drive 140V and 200V speaker lines.

Please observe all necessary safety precautions as the potential for electric shock at the speaker terminals is present.

With the amplifier turned **OFF**, move the rear mounted selector switch to the "Bridge" position and connect the input signal to channel 1. Connect your speaker load across the "+" terminals of both output terminals as follows:

- **140V Operation** - Connect the positive lead of the speaker load to the channel 1 70V positive "+" terminal, the negative speaker lead connects to the channel 2 70V positive "+" terminal. Connect a suitable jumper wire between the two terminals labeled "0". Consult your local codes to determine if Class I wiring is required (Figure 11).
- **200V Operation** - Connect the positive lead of the speaker load to the channel 1 100V positive "+" terminal, the negative speaker lead connects to the channel 2 100V positive "+" terminal. Connect a suitable jumper wire between the two terminals labeled "0". Consult your local codes to determine if Class I wiring is required (Figure 12).

**CAUTION: A high voltage potential exists across the two "+" speaker terminals when operating in any Bridge Mode application!**


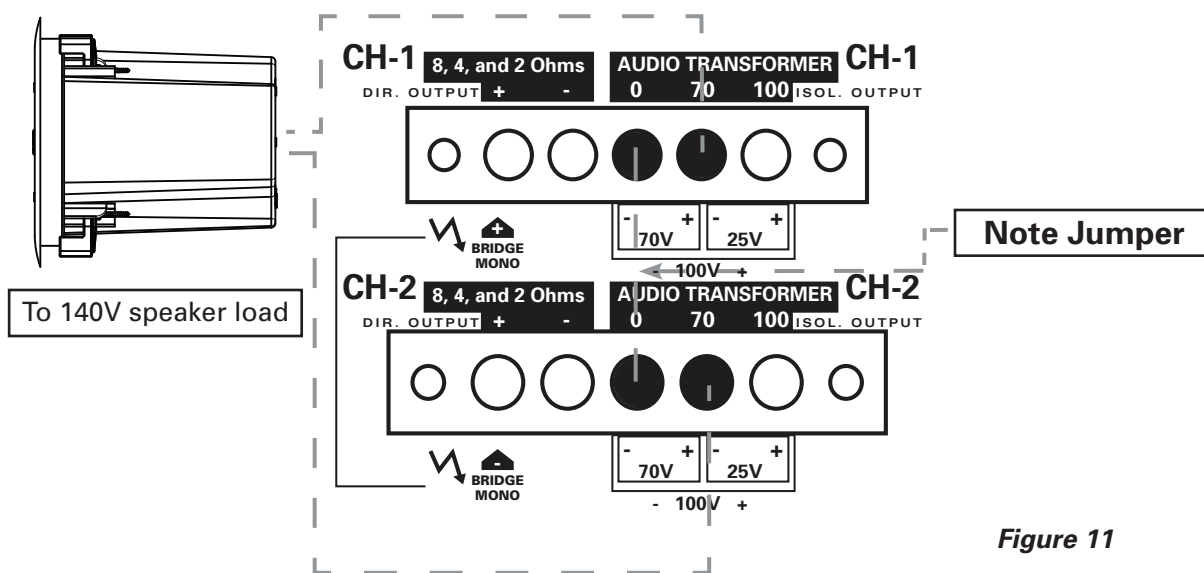


Figure 11



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435

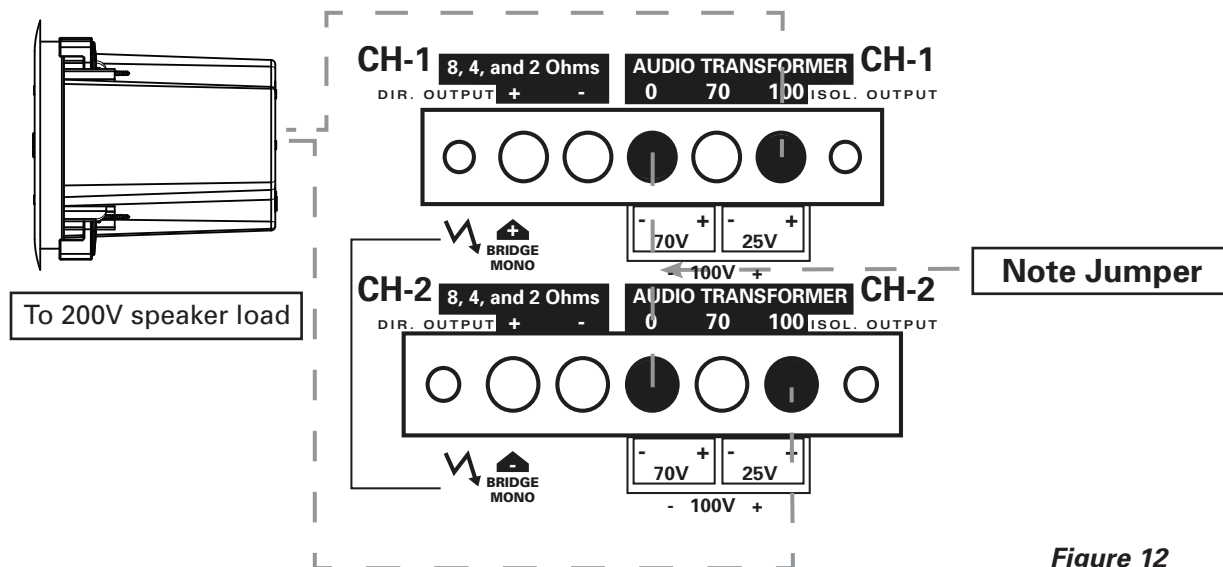

**Figure 12**



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435



# CP400 & CP700 Commercial Power Amplifier

## Owner's Manual

### SPECIFICATIONS

DIRECT POWER OUT			PROTECTION CIRCUITS	
Max Average Power @ 35 Hz-20 kHz with 0.1% THD (10-80K Filter)	<b>CP400</b>	<b>CP700</b>	Output Offset Voltage Protection Heat Sink Overheat Protection Transformer Overheat Protection Load Shorting Protection Power On/Off Protection Soft Clip Limiters	
8 Ω, 1 kHz, 0.1% THD	160 W X 2	240 W X 2		
4 Ω, 1 kHz, 0.1% THD	240 W X 2	400 W X 2		
2 Ω, 1 kHz, 0.1% THD	270 W X 2	550 W X 2		
Bridged Mono 8 Ω 1 kHz, 1% THD	500 W	850 W		
Bridged Mono 4 Ω 1 kHz, 1% THD	600 W	1100 W		
TRANSFORMER OUTPUTS			CONTROLS	
25V	175 W X 2	280 W X 2	Power Switch, Ch 1/Ch 2 gain (41 step) Parallel/Stereo/Bridge Switch	
70V	200 W X 2	350 W X 2		
100V	200 W X 2	350 W X 2		
140V Bridged	400 W	700 W		
200V Bridged	400 W	700 W		
FREQUENCY RESPONSE			COOLING	
Direct Outputs (±3 dB)	30 Hz-50 kHz		Dual Speed Fan, Temperature Controlled	
Transformer Outputs (±3 dB)	30 Hz-16 kHz			
THD+N			INDICATORS	
8 Ω, 1 kHz, 240 W per channel	<.05%		Power, Protect, Signal, Limit	
SENSITIVITY			DIMENSIONS	
Rated Output into 8 Ω	1.25V		5.19" X 18.9" X 16.85" (132 mm X 480 mm X 428 mm)	
VOLTAGE GAIN			NET WEIGHT	
	32 dB		<b>CP400</b> 44.5 lbs (20.2 kg)	<b>CP700</b> 54 lbs (24.3 kg)
INPUT IMPEDANCE			SHIPPING WEIGHT	
Balanced/Unbalanced	20 k/10 k Ω		<b>CP400</b> 47 lbs (23 kg)	<b>CP700</b> 57 lbs (26 kg)
DAMPING FACTOR				
8 Ω Output, 10 V rms	>200 dB			
S/N RATIO				
8 Ω per Channel @240 W	>100 dB			



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435



### **Limited Warranty**

All products manufactured by Atlas Sound are warranted to the original dealer/installer, industrial or commercial purchaser to be free from defects in material and workmanship and to be in compliance with our published specifications, if any. This warranty shall extend from the date of purchase for a period of three years on all Atlas Sound products, including SOUNDOLIER brand, and ATLAS SOUND brand products except as follows: one year on electronics and control systems; one year on replacement parts; and one year on Musician Series stands and related accessories. Additionally, fuses and lamps carry no warranty. Atlas Sound will solely at its discretion, replace at no charge or repair free of charge defective parts or products when the product has been applied and used in accordance with our published operation and installation instructions. We will not be responsible for defects caused by improper storage, misuse (including failure to provide reasonable and necessary maintenance), accident, abnormal atmospheres, water immersion, lightning discharge, or malfunctions when products have been modified or operated in excess of rated power, altered, serviced or installed in other than a workman like manner. The original sales invoice should be retained as evidence of purchase under the terms of this warranty. All warranty returns must comply with our returns policy set forth below. When products returned to Atlas Sound do not qualify for repair or replacement under our warranty, repairs may be performed at prevailing costs for material and labor unless there is included with the returned product(s) a written request for an estimate of repair costs before any non-warranty work is performed. In the event of replacement or upon completion of repairs, return shipment will be made with the transportation charges collect.

EXCEPT TO THE EXTENT THAT APPLICABLE LAW PREVENTS THE LIMITATION OF CONSEQUENTIAL DAMAGES FOR PERSONAL INJURY, ATLAS SOUND SHALL NOT BE LIABLE IN TORT OR CONTRACT FOR ANY DIRECT, CONSEQUENTIAL OR INCIDENTAL LOSS OR DAMAGE ARISING OUT OF THE INSTALLATION, USE OR INABILITY TO USE THE PRODUCTS. THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Atlas Sound does not assume, or does it authorize any other person to assume or extend on its behalf, any other warranty, obligation, or liability. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

### **Service**

Should your CP400 or CP700 require service, please contact the Atlas Sound warranty department at 1-877-689-8055, ext. 277 to obtain an RA number.

Atlas Sound Tech Support can be reached at 1-800-876-3333.

Visit our web site at [www.AtlasSound.com](http://www.AtlasSound.com) to see other Atlas products.



©2010 Atlas Sound L.P. All rights reserved. Atlas Sound and Atlas Power are trademarks of Atlas Sound L.P.  
All other trademarks are the property of their respective owners. ATS002102 RevE 08/10



**Atlas  
Sound**

1601 Jack McKay Blvd. • Ennis, Texas 75119 U.S.A.  
Telephone: 800.876.3333 • Fax: 800.765.3435





# CP400

*High-Performance, Dual-Channel, Commercial Power Amplifier*



**CP400**

## Features


- Independent Power Supplies
- Soft Clip Limiter Protection
- Dual-Speed, High Efficiency Fan Cooling
- Stepped Attenuators Mounted on the Rear for Security
- Stereo, Bridge, or Parallel Operating Modes Selectable Via Rear Mounted Switch
- Balanced Inputs on Barrier Strip and XLR Connectors
- Loop Through Feature on Male XLRs, One Per Channel Input
- Short-Circuit, Temperature, and DC Offset Protection
- 25V, 70.7V, 100V, and Direct Coupled (2,4, & 8Ω) Outputs Mounted on Barrier Strips with Covers for Safety
- Toroidal Output Transformers Provide Extended High Frequency Response and Effectively Lower the Electrical Interference
- Power-Up Muting

## General Description

The Atlas Sound CP400 is a high power dual channel amplifier with independent internal power supplies, providing excellent channel separation and low distortion. Rear mounted stepped attenuators provide gain setting repeatability and ease of setup. Front panel mounted indicators provide status of signal present, limiter operation, and protection circuit operation. In addition to having rear mounted barrier strips for inputs and outputs for permanent installations, the Atlas Sound CP400 also has XLR input connectors for portable sound equipment use. In Bridge Mono mode, the CP400 can provide 140V/200V operation for long, speaker lines and large speaker loads. Large toroidal output transformers (1 per channel) provide outstanding isolation for commercial applications.

## Applications

The Atlas Sound CP400 is the perfect choice for distributed paging/BGM systems, foreground music systems, and distributed sound masking applications. Also perfect for night clubs, theaters, portable sound systems, and anywhere clean high-fidelity audio amplification is needed.

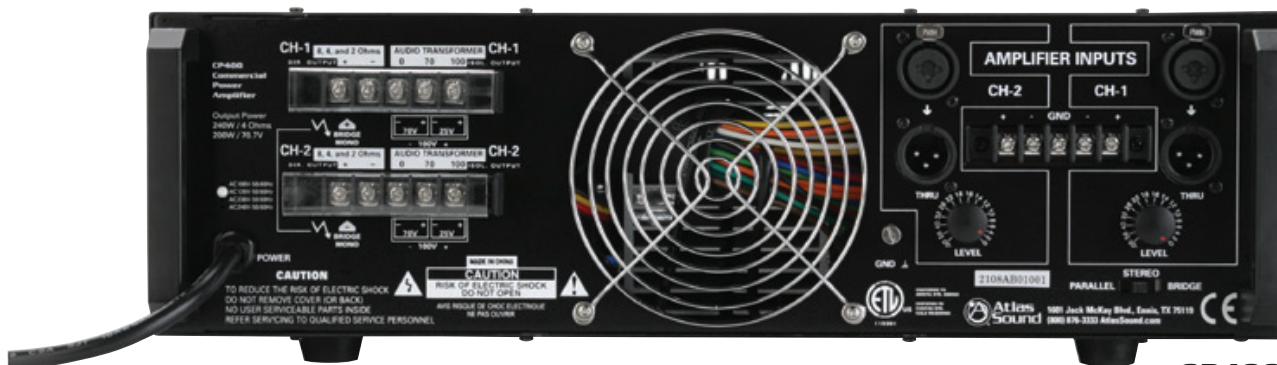

**CP400  
(Back)**



## Specifications

### Direct Power Out

8 $\Omega$ , 1kHz, 0.1% THD	160 Watts x 2
4 $\Omega$ , 1kHz, 0.1% THD	240 Watts x 2
2 $\Omega$ , 1kHz, 0.1% THD	270 Watts x 2

Bridged Mono 8 $\Omega$ 1kHz, 1% THD	500 Watts
Bridged Mono 4 $\Omega$ 1kHz, 1% THD	600 Watts

### Transformer Outputs

25V	175 Watts
70.7V	200 Watts
100V	200 Watts
140V Bridged	400 Watts
200V Bridged	400 Watts

### Frequency Response

Direct Outputs	30Hz – 50kHz ( $\pm 3$ dB)
Transformer Outputs	30Hz – 16kHz ( $\pm 3$ dB)

### THD+N

8 $\Omega$ , 1kHz, 240 Watts per channel	<.05%
--	-------

### Sensitivity

Rated Output into 8 $\Omega$	1.25V
------------------------------	-------

### Voltage Gain

32dB

### Input Impedance

Balanced	20k $\Omega$
Unbalanced	10k $\Omega$

### Damping Factor

8 $\Omega$ Output, 10Vrms	>200dB
---------------------------	--------

### S/N RATIO

8 $\Omega$ per Channel @ 240 Watts	>100dB
------------------------------------	--------

### Protection Circuits

Output Offset Voltage Protection  
Heat Sink Overheat Protection  
Transformer Overheat Protection  
Load Shorting Protection  
Power On/Off Protection  
Soft Clip Limiters

### Controls

Power Switch, Ch 1 / Ch 2 gain (41 step)  
Parallel / Stereo / Bridge Switch

### Cooling

Dual Speed Fan, Temperature Controlled

### Indicator LEDs

Power, Protect, Signal, Limit

### Power Consumption

Idle	.41A, 38 Watts, 130 BTU
Average	2.4A, 291 Watts, 992 BTU
Max	7.3A, 876 Watts, 2989 BTU

**Note:** Average Power is  $\frac{1}{3}$  rating, 25% head room, and 50% music signal duty cycle.

### Dimensions

Height	5.19" (132mm)
Width	19" (483mm)
Depth	16.85" (428mm)

## Architect & Engineer Specifications

The amplifier shall be Atlas Sound CP400 Commercial Audio Amplifier. The power amplifier shall have two channels. At 8 $\Omega$ , 35Hz – 20kHz, it shall deliver 160 Watts per channel. At 4 $\Omega$ , 1kHz, it shall deliver 240 Watts per channel. At 2 $\Omega$ , 1kHz, it shall deliver 270 Watts per channel. In bridge mono mode, with an 8 $\Omega$  load, it shall deliver 500 Watts. In bridge mono mode, with a 4 $\Omega$  load, it shall deliver 600 Watts. The amplifier shall have internal circuits to protect itself from output short circuits and thermal overload and will protect attached loudspeakers from amplifier failure and DC voltages. A variable speed fan shall provide heat sink cooling. Each channel to have an input sensitivity of 1.25V, frequency response shall be 30Hz – 50kHz ( $\pm 3$ dB) direct mode and 30Hz – 16kHz ( $\pm 3$ dB) in transformer mode. Front panel indicators to include signal present, limiter, and protection LEDs. Rear mounted stepped attenuators to provide repeatability of gain settings. Input terminations shall be balanced on barrier strip terminals or XLR female connectors. Loudspeaker outputs shall be of the barrier strip type. A switch on the rear panel to provide selection of Stereo, Parallel, and Bridge Modes of operation. Dimensions shall be 5.19" x 18.9" x 16.85" (132mm x 483mm x 428mm) and the amplifier shall weigh 47lbs.